



Humidity Indicator Card Replacement Instructions

For AGM Container Controls TA348, TA350, TA351, TA354, TA356, and TA357 series humidity indicator plugs

Required Tools

- Large adjustable wrench or vise to hold 1-3/8" hex flange
- 1/2" hex wrench, sometimes called an Allen wrench

Instructions

1. Hold the housing by the 1-3/8" hex flange.
2. Insert a 1/2" hex wrench (Allen wrench) into the lock screw and turn it counter-clockwise to remove it.
3. Remove the plastic washer.
4. Remove the old humidity indicator card.
5. Install the new humidity indicator card.
6. Re-install the plastic washer.
7. Re-install the lock screw. NOTE: An o-ring is located between the window and the housing face. Before reassembling the indicator, make sure that this o-ring has not been moved out of position: the window should fit such that its outer surface is roughly even with the opening in the housing face and the o-ring should be hidden or just barely visible as a thin black line.
8. Hold the housing by the 1-3/8" hex flange and torque the lock screw to 20-35 inch-pounds.